

How to Assemble an MTech PAD Case



These assembly instructions are for the MTech EMV with iPad Mini 7 and Magtek Payment Device.

Step 1

Gather all parts from the Parts List page 3. Before assembly, power on the Magtek Payment Device and ensure that only a single light is visible on the front of the device. If four lights turn on, contact Tabit Support.

- ◆ MTech Case
- ◆ MTech Smart Box
- ◆ MTech Smart Box Cushion
- ◆ Magtek Payment Device
- ◆ (2) USB-C, Right Angle Cables (3")

Step 2

Adhere the Smart Box Cushion to the side of the MTech Smart Box that has the etched mtech on the top. (Fig. 1)

Step 3

Connect the 2 small USB-C cables into the MTech Smart Box. There are 2 connections on the device. CR (Card Reader) - connects to the Magtek Payment Device and Host - connects to the iPad Mini 7. Ensure the CR cable is behind the Host cable for easy installation in to the case. (Fig. 2)

Note: The connectors on the USB-C, Right angle cables are slightly bigger on one end. The bigger of the two ends will connect into the Smart Box, the smaller end will connect into the associated devices.

Step 4

Insert the MTech Smart Box and cables in to the open spot on the lower left side of the case. The cushion side of the MTech Smart Box will be facing out, with the cables pointing to the top of the case. (Fig. 3)

Step 5

Prior to installing your Magtek Payment Device into the case, connect the USB-C cable that is plugged into the CR slot on the Smart Box into the MagTek Payment Device. Install the Magtek Payment Device into the Case with the cables pointing towards the center of the Case. (Fig. 4)

Step 6

Connect the USB-C cable that is plugged into the Host port on the Smart Box into the iPad Mini 7. The cable should point towards the Smart Box, not towards the Magtek Payment Device. (Fig. 5)

Step 7

Insert the iPad into the case, make sure the connected USB-C cable fits between the Smart Box and the Magtek Payment Device. Make sure that the entire iPad is secured in the case and that all cables are seated correctly. (Fig. 6)

Installation Schematics

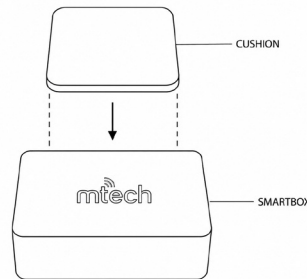


Fig. 1. Affix Cushion to Smart Box

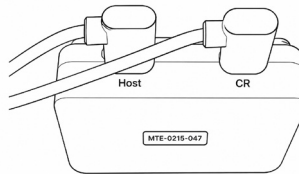


Fig 2. Connect Cables to Smart Box

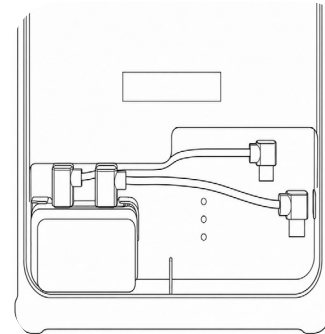


Fig. 3 - Insert Smart Box and Cables into the Case

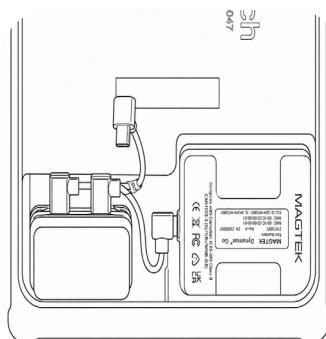


Fig. 4 - Connect USB-C (CR) to Magtek Device and install into the case

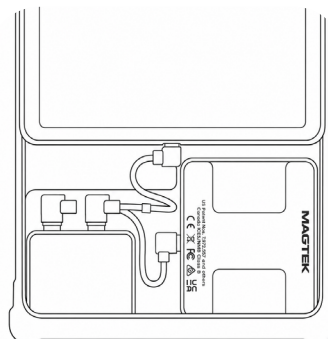


Fig. 5 - Connect USB-C cable (Host) to iPad

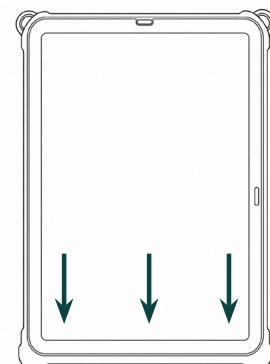


Fig. 6 - Insert Pad into Case

Parts List



iPad Mini 7



MTech Case



front



back

Magtek Payment Device



MTech Smart Box



Smart Box Cushion



*USB-C Cables
(2 needed for assembly)*